



Clavinova® CLP-625 Quick Operation Guide

While holding down the applicable button, press one of the highlighted keys shown below to select a Demo Song or set a parameter.

1 Song playback

DEMO/SONG +

Quick Play A#-1 C#0 D#0 F#0 G#0 A#0

Demo Songs C#1 D#1 F#1 G#1 A#1

50 Preset Songs (50 Classical Music Masterpieces) Song number

Song Data Loaded from the Computer

Off On

Bösendorfer Stage E.PIano

Harpischord Pipe Organ Strings

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50

1st Song 2nd Song 3rd Song 4th Song 5th Song 6th Song 7th Song 8th Song 9th Song 10th Song

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

* 50 Preset Songs (50 Classical Music Masterpieces) Song number / Song name

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohltemperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G Strings	12 From the New World	22 Menuett G dur BWV.Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonata No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonata op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonata op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/BI 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonata op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Impromptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlinglied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Impromptu	40 Blumenlied	50 Gymnopédies No.1

2 Voice settings

PIANO/VOICE +

IAC Depth A#-1 C#0 D#0 F#0 G#0 A#0

Voices C#1 D#1 F#1 G#1 A#1

Reverb Types C#2 D#2 F#2 G#2 A#2

Dampner Resonance

Reverb Depth C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4

Octave Shift (Dual/Duo mode) C#5 D#5 F#5 G#5 A#5

Volume Balance (Dual/Duo mode) C#6 D#6 F#6 G#6 A#6

Touch Sensitivity

-3 -2 -1 0 +1 +2 Off On

CFX Grand Pop Grand DX E.PIano

Harpischord Pipe Organ Strings

Recital Hall Concert Hall Chamber Club Off

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

Most suitable for the selected voice

-1 (Voice 1) +1 (Voice 1) 0 (Voice 2) +1 (Voice 2)

-5 -4 -3 -2 0 +1 +2 +3 +4 +5

Fixed Medium Hard

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

Clavinova® CLP-625 Quick Operation Guide

3 Metronome settings

Voice confirmation of current Tempo value

Tempo (Metronome, Songs, etc.)

Metronome Beat

Metronome Volume

METRONOME +

To increase the value by 1:
 METRONOME + [R]

To decrease the value by 1:
 METRONOME + [L]

Key labels: A#-1, C#0, D#0, F#0, G#0, A#0, C#1, D#1, F#1, G#1, A#1, C#2, D#2, F#2, G#2, A#2, C#3, D#3, F#3, G#3, A#3, C#4, D#4, F#4, G#4, A#4, C5.

4 Other settings

Operation Confirmation Sounds

Tuning

MIDI Transmit Channel

Transpose

MIDI Receive Channel

Auto Power Off

Local Control

Program Change

Control Change

Song Playback Channel

DEMO/SONG + PIANO/VOICE

Key labels: A#-1, C#0, D#0, F#0, G#0, A#0, C#1, D#1, F#1, G#1, A#1, C#2, D#2, F#2, G#2, A#2, C#3, D#3, F#3, G#3, A#3, C#4, D#4, F#4, G#4, A#4, C#5, D#5, F#5, G#5, A#5, C#6, D#6, F#6, G#6, A#6, C7.

5 Tuning settings

While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the [+R], [-L] or both buttons as shown below to fine-tune the pitch of your instrument.

To tune up (in about 0.2 Hz steps):

To tune down (in about 0.2 Hz steps):

Default pitch: 440.0 Hz

6 Duo setting

While holding down the [PIANO/VOICE] button, simultaneously press the [+R] and [-L] buttons to turn Duo on or off.

To turn Duo on or off: